



KERMATDI

KermaTDI
Oil Catch Can
Install Instructions

Parts List

- Catch Can
- Assorted Hose Clamps
 - Breather Hose
 - AN Breather Fitting
 - Catch Can Mount

Tools Needed

- Flat Head Screw Driver
 - 6MM Allen
 - 21MM Socket
 - 3/8" Ratchet
 - Teflon Tape

Step 1. Remove Engine Cover





Step 2. Add Teflon Tape to AN Fitting


Step 3. Using a 21mm socket install AN Fitting to Catch Can




Step 4. Remove breather hose from PCV and Intake

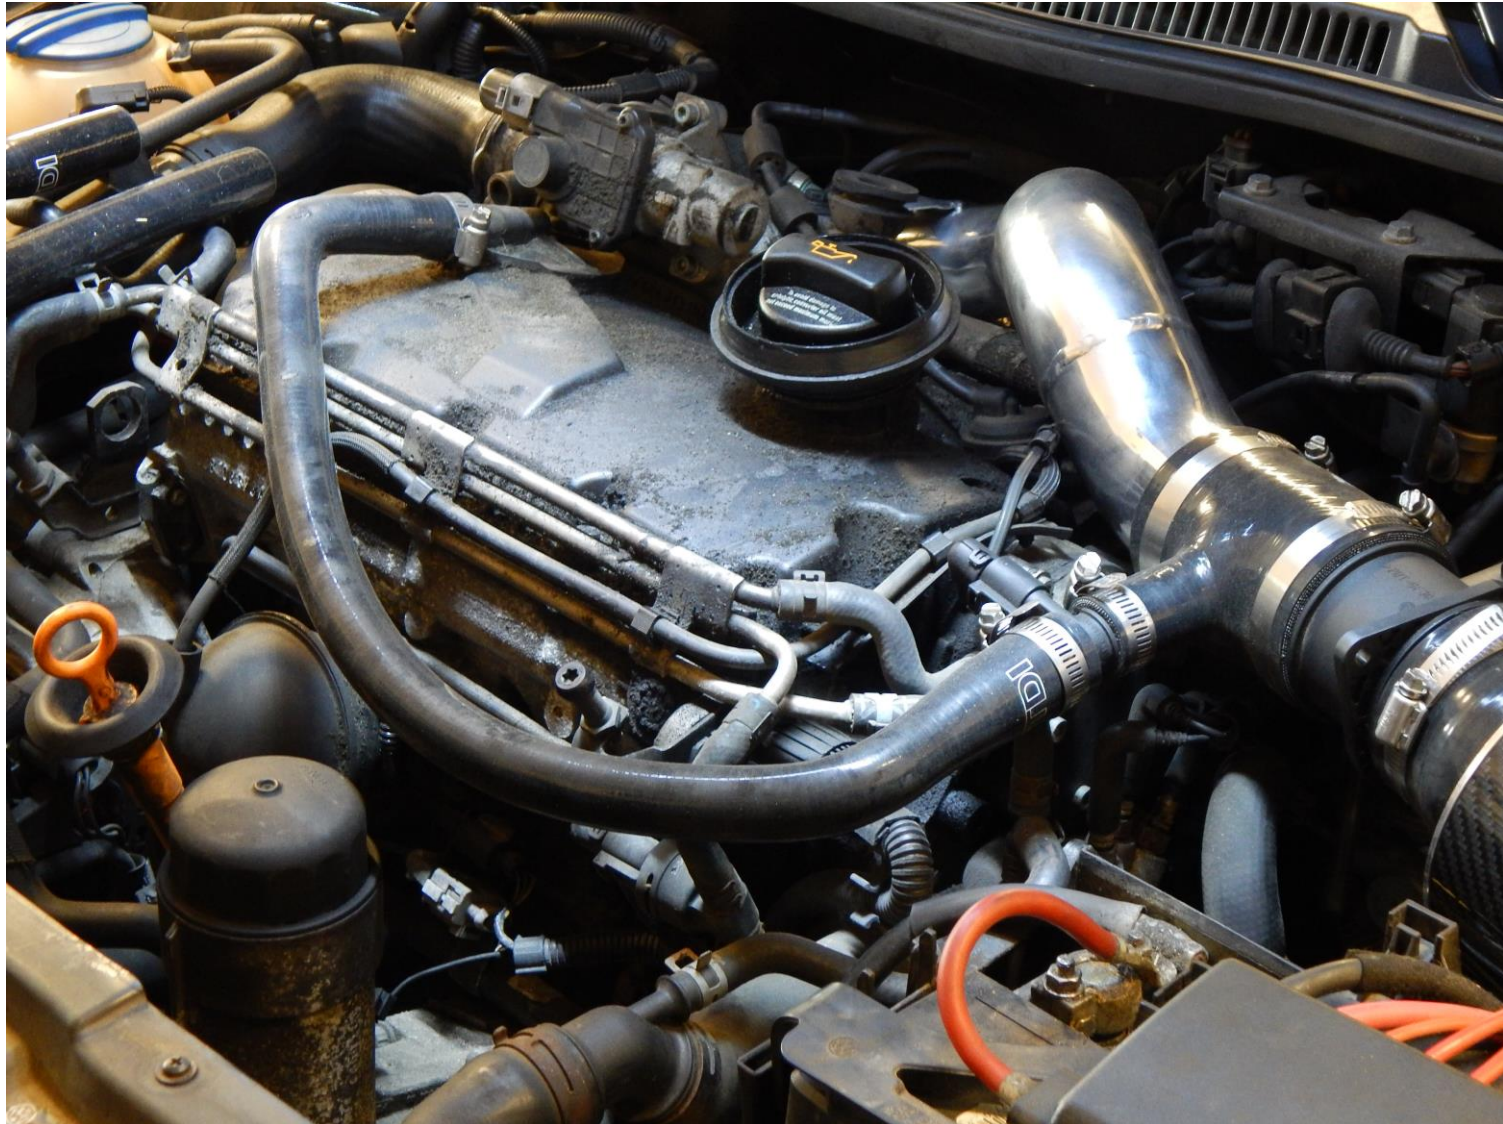

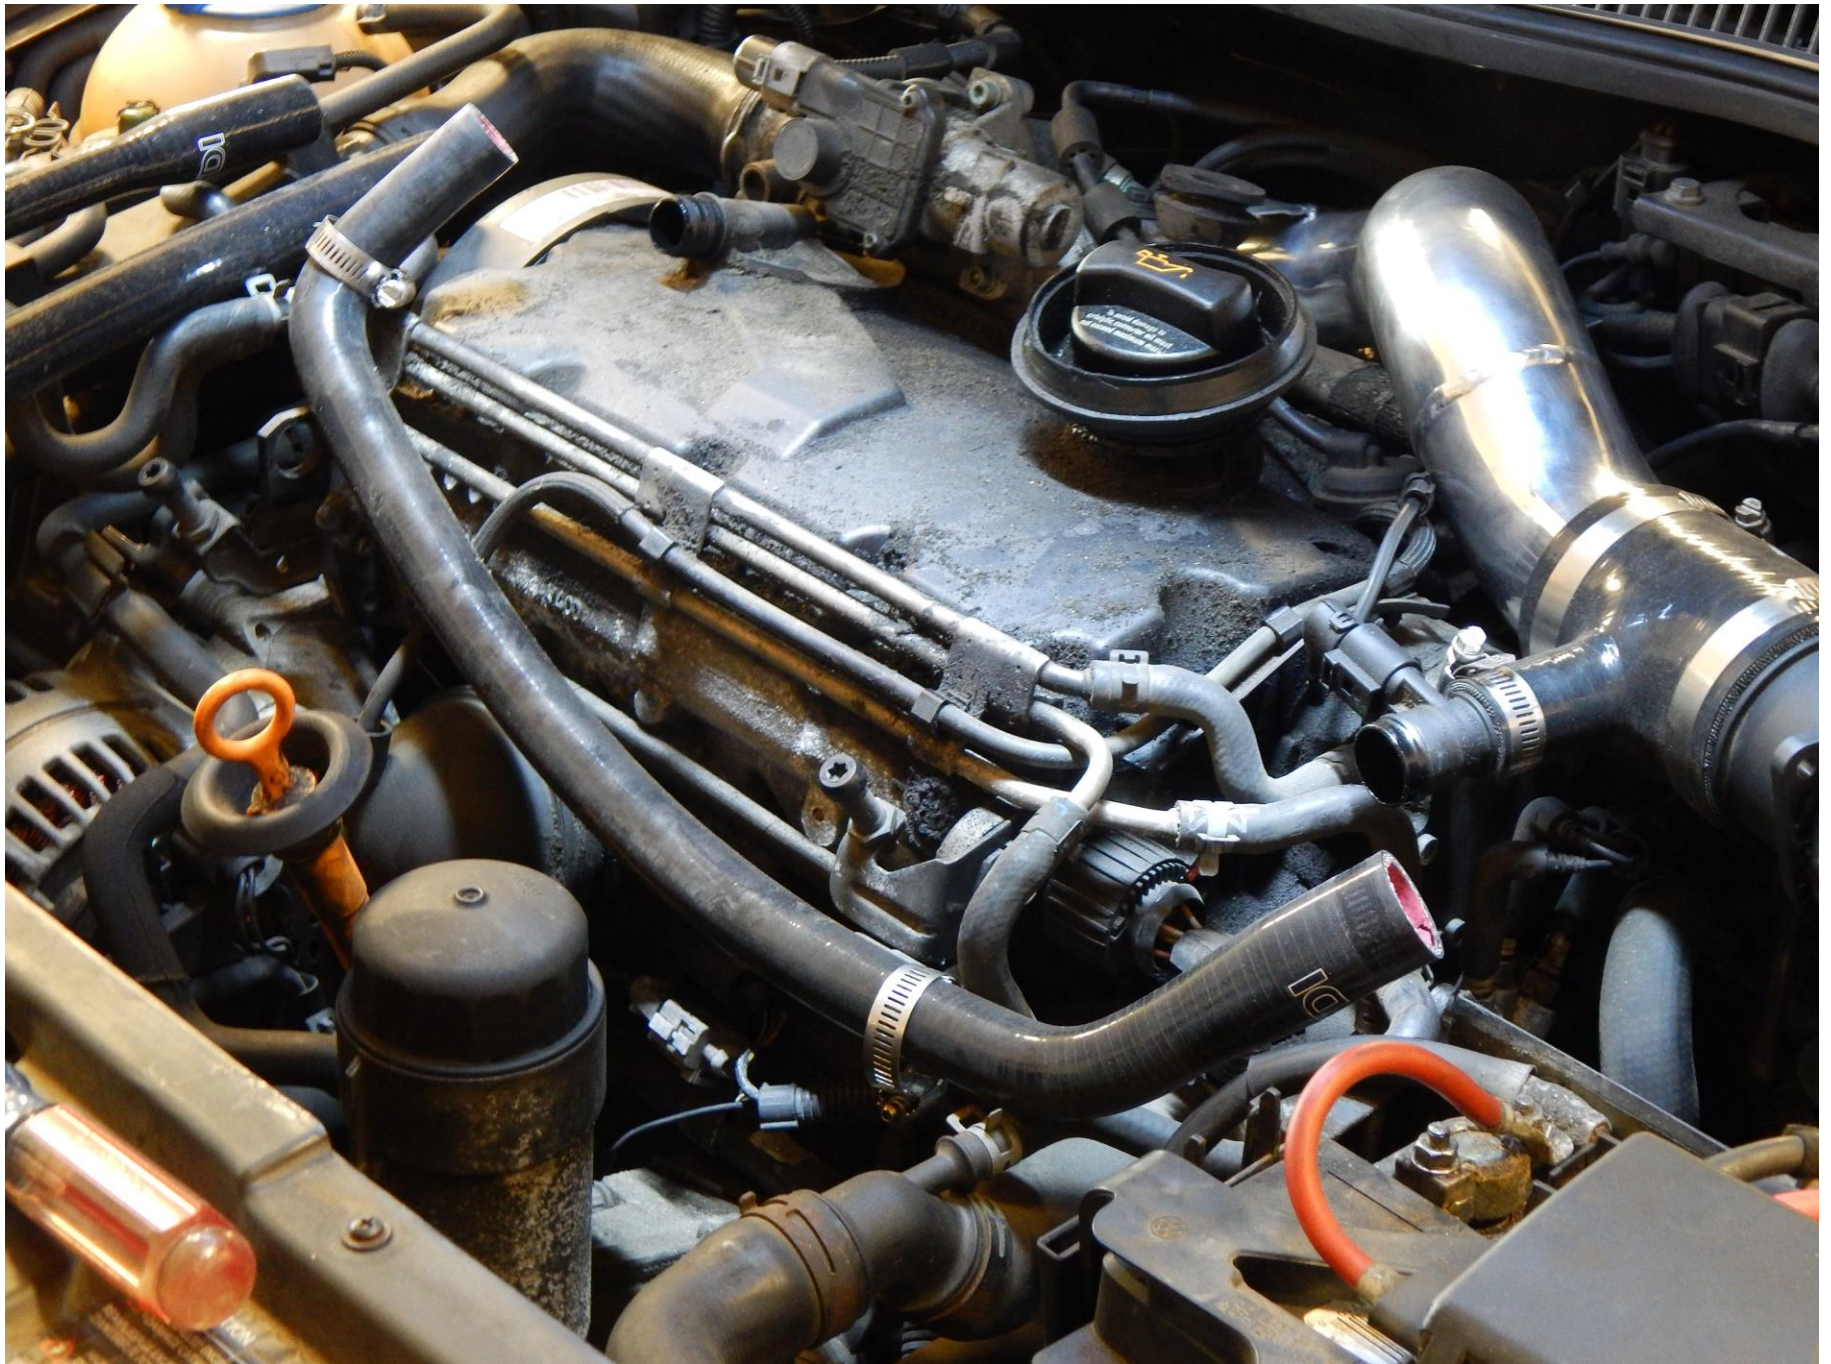

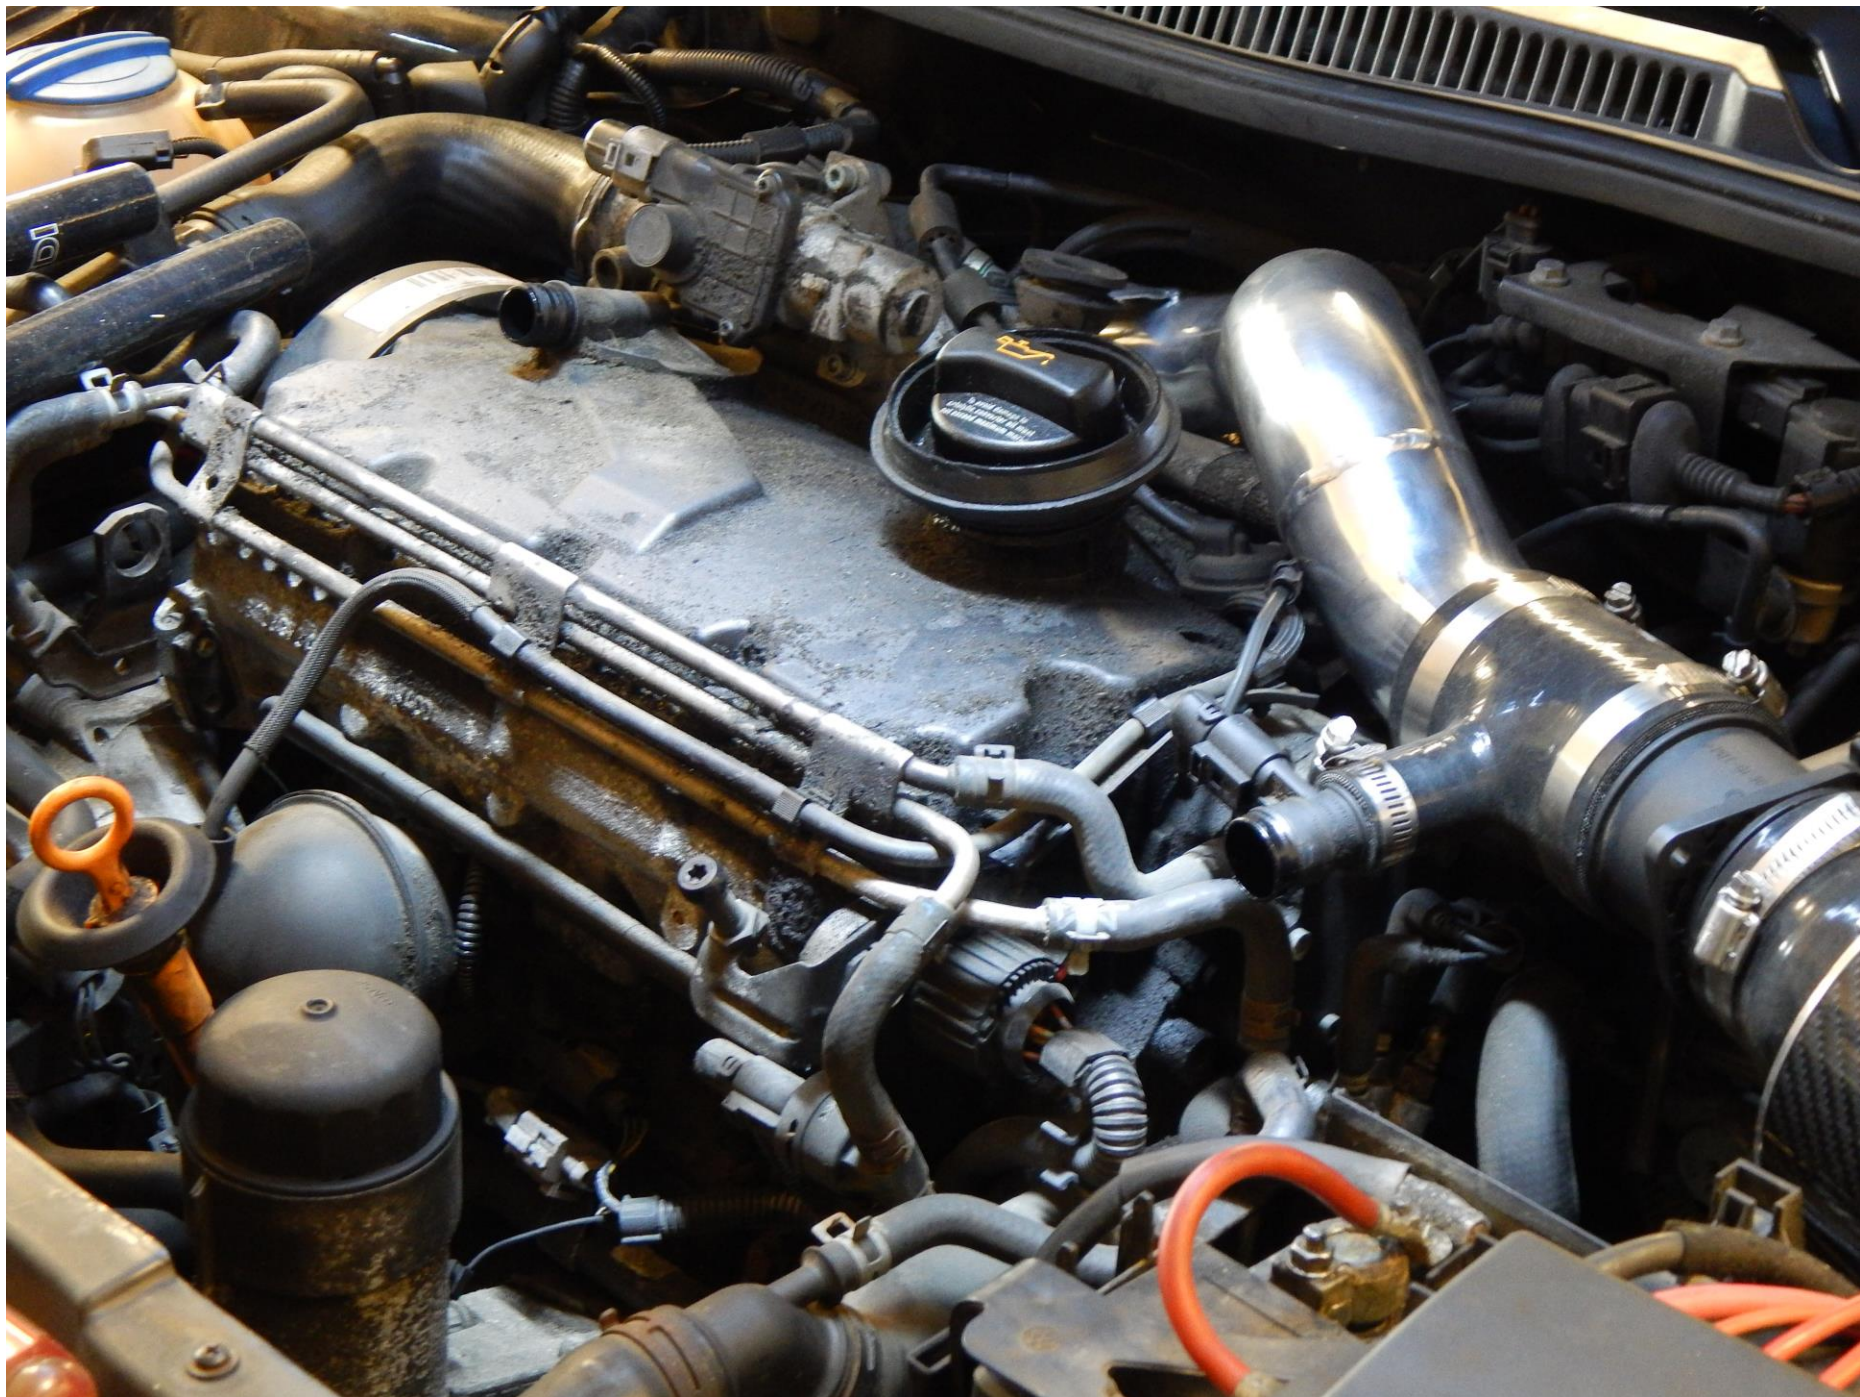

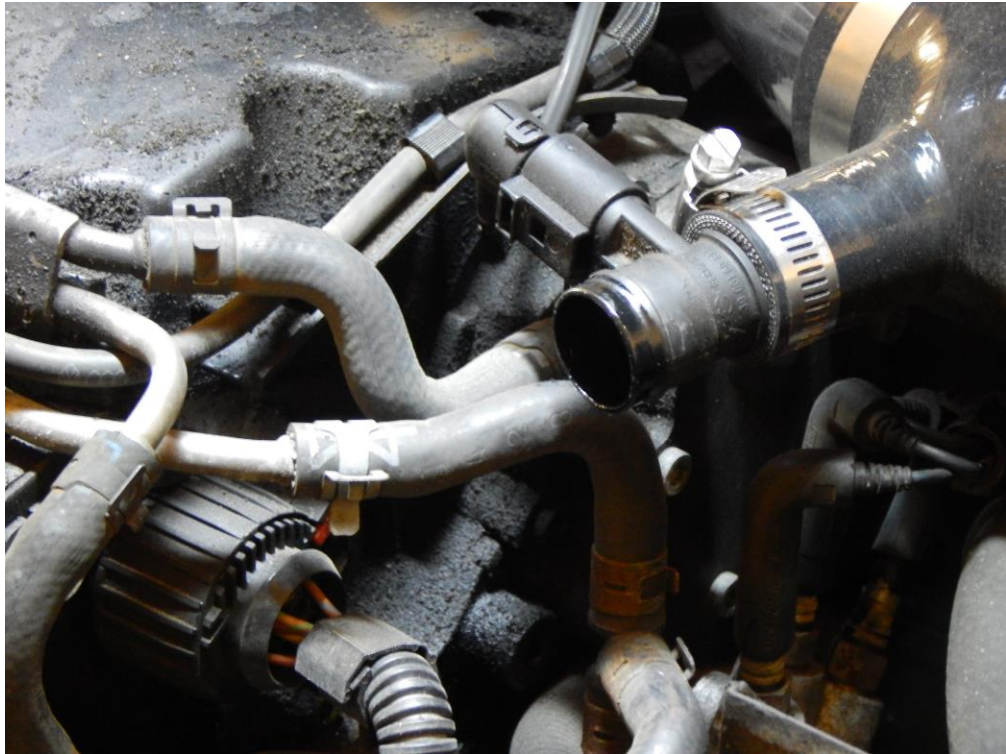

<- Intake Connection

PCV Connection ->



5. Mount Catch Can Bracket, Install Catch Can, and Tighten Bracket w/6MM Allen



7. Connect Hoses to PCV, Intake, and Catch Can



*Some trimming may
be required
on hoses and engine cover
depending
on modifications

Thank you for Purchasing
from **KermaTDI!**