

# NEUSPEED®

## P-FLO AIR INTAKE KIT – PART # 65.10.83

Fits: 2010-14 AUDI A3 2.0L TDI, 2009-14 VW Jetta V 2.0L TDI, 2010-14 VW Jetta VI 2.0L TDI Sedan & Sportwagen and 2010-14 Golf VI 2.0L TDI with 5-Pin MAF

### PARTS LIST:

1 – INTAKE PIPE	1 – STAINLESS STEEL P-FLO BRACKET	2 – M6 LOCK NUTS	1 – 90° SILICONE HOSE
2 – #48 HOSE CLAMP	1 – NEUSPEED FILTER	1 – RUBBER ISOLATOR	1 – RUBBER GROMMET
1 – ACORN NUT	2 – M6 x 16mm CAP BOLTS		1 – WIRE HARNESS

### TOOLS REQUIRED:

1 – PHILIPS SCREWDRIVER	1 – 5mm HEX KEY WRENCH	1 – 8mm NUT DRIVER
1 – 7/16 OR 11MM WRENCH	1 – SPRING CLAMP PLIERS	1 – T25 TORX
1 – 10 MM WRENCH	1 – 4MM HEX KEY WRENCH	




1. Disconnect Mass Air Flow (MAF) sensor electrical connector.



2. Disconnect vacuum hose from air filter box lid.



3. Disconnect air intake hose from MAF using spring clamp pliers.

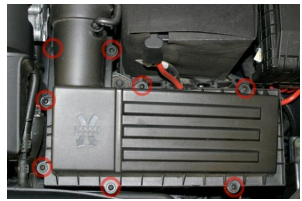

4. Unscrew all Philips screws around air filter box lid and remove.



5. Disconnect hot air duct from back side of air filter box.



6. Remove cover at intake duct.



7. Using a 5mm hex key wrench, unbolt lower air filter box, located on back side.



8. Lift off lower air filter box from rubber grommet mounts, then lift out left side first and rotate intake duct around small coolant hose to remove.




9. Remove air intake duct at radiator support (2) T25 Torx, one on each side.



11. Remove MAF sensor from air box lid using a Philips screwdriver.



12. Install and tighten rubber isolator into threaded stand-off just in front of battery.

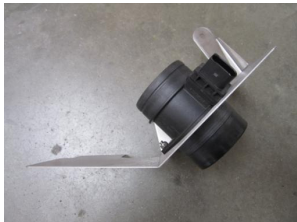

13. Mount MAF sensor to SS P-Flo bracket using supplied M6x16mm screws and lock nuts, then tighten.



16. Install intake pipe with port closer to the front and positioned at 1 o'clock.



18. Connect vacuum line to port on NEUSPEED intake pipe.



20. Move MAF wire harness support clip down next to vacuum canister.



23. Attach and tighten NEUSPEED filter. Position NEUSPEED logo on end of filter horizontally.



14. Install NEUSPEED P-Flo bracket onto rubber grommet mount and rubber isolator.



17. Install 90° silicone hose onto MAF. NOTE: Use silicone spray to ease install. Slide the two supplied #48 hose clamps onto silicone hose and then connect to intake pipe. Now position clamps and tighten.



19. Connect supplied MAF harness extension.



21. Install rubber strip on top-edge of P-Flo bracket.




24. Double-check complete installation.



15. Install and tighten acorn nut using an 11mm wrench.



17. Install 90° silicone hose onto MAF. NOTE: Use silicone spray to ease install. Slide the two supplied #48 hose clamps onto silicone hose and then connect to intake pipe. Now position clamps and tighten.

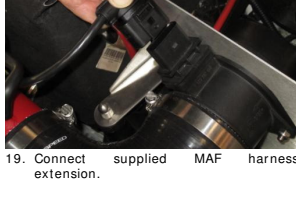

19. Connect supplied MAF harness extension.



22. For extra protection, slide coolant hose protector sleeve just under P-Flo bracket.

Copyright 2013, NEUSPEED®  
All rights reserved. Reproduction in whole or in part prohibited.  
DOC. 65.10.83 Rev. 07.25.12